



3603 North Main Street Wayland, MI 49348  
(269) 792 - 0044 800-366-2878 Fax (269) 792 - 8126  
www.curv-rite.com mail@curv-rite.com



## ALUMINUM LANDSCAPE EDGINGS & PAVER RESTRAINTS

### Landscape Edging Installation Instructions:

Tools: Spade,  
Hacksaw, Hammer

1. Lay strips of edging down in proximity of bed area to be defined by edging. (Note: Handle with reasonable care so that ends of edging are not damaged.)
2. Connect strips of edging by slipping the ends straight into each other with a **minimum of 2 inches of overlap.**
3. As edging strips are being connected, begin defining the bed area with the edging by standing edging up vertically on top of grade. Keep stake pockets towards bed area. (Note: twist and/or flex edging while moving to keep edging from sliding apart.)
4. Adjust bed outline to suit keeping in mind the trench will be dug 6 to 12 inches offset from the edging.
5. Using a spade (or an edger/trencher) dig a trench 6 to 12 inches offset from the edging.
6. Position edging in trench such that **top of edging will be approximately 1/2" above final grade.**
7. At the end of the bed area, slide edging further together if there is only a little extra. If cutting is necessary, cut through entire piece of edging with a sharp hacksaw while supporting edging firmly on a flat surface.
8. Drive stakes down through stake pockets as shown above to permanently secure edging in place.
9. Fill in with finish grade and/or bed media along edging. **Compact grade near edging such that finish grade is 1/2 inch below top of edging.**

For Technical  
Questions  
Call  
1-800-366-2878

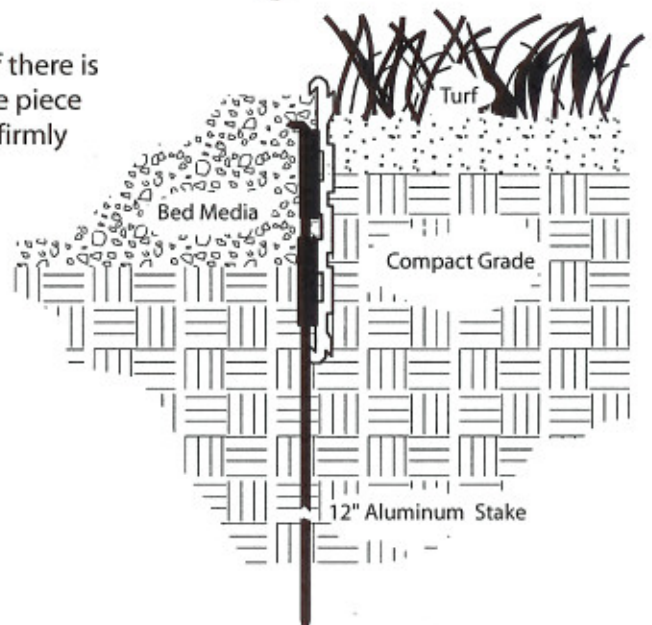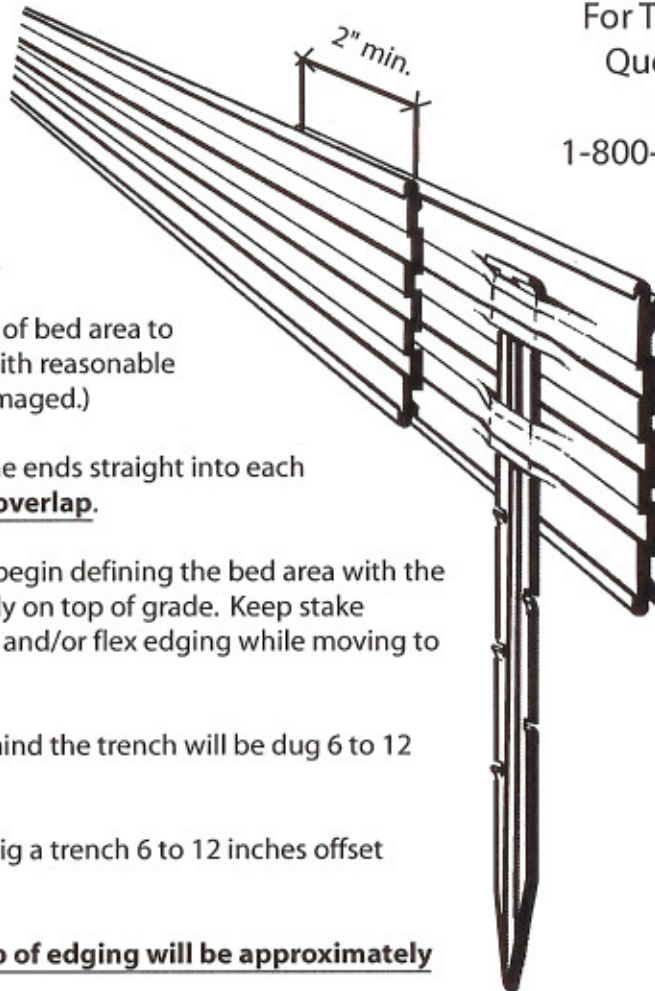

### Aluminum Landscape Edging

Curv-Rite® 3000 Series